

figure 1

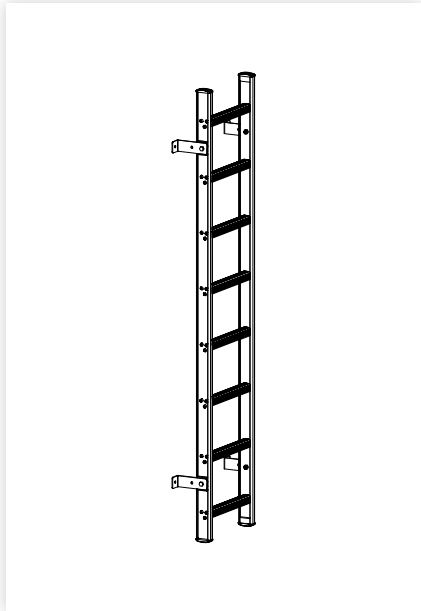


figure 2

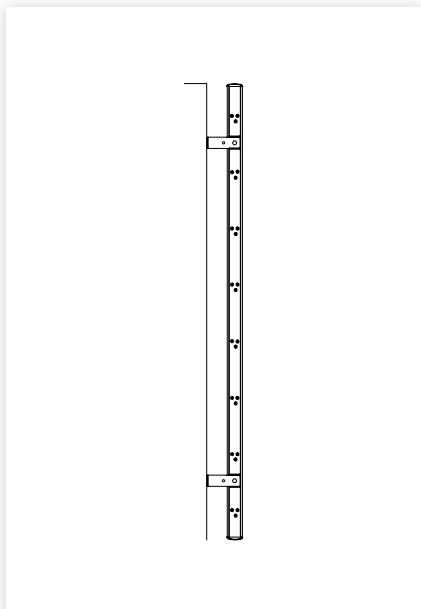


figure 3

Vertical Ladder

Installation Instructions

Important

These instructions are not intended to be a complete lesson in the installing of vertical ladders but a procedural guide to competent tradespeople or DIYers.

Tools Required

The screws supplied with this ladder require a 5/16" nut setter for easy installation. This can be used with a 18v battery drill or a standard power drill. Apart from this, only standard carpentry tools are required.

Installing The Ladder

Note: Sellwood vertical ladders are supplied to suit a predefined vertical height upon order confirmation, requiring no further adjustment.

1. With the bolts supplied secure the fixing brackets to the ladder stile and ensure the bolts are securely fastened.
2. Secure the ladder in place by screwing through the fixing brackets using the fixings provided. Ensure that the screws penetrate solid timber or support material.
3. Sellwood vertical ladders are set at a 90-degree angle. Double-check the ladder bolts and screws are securely fastened before climbing.